



Sparepart



clever mobility




ASSEMBLY INSTRUCTION Rear brake (K3)





Tool: Screwdriver

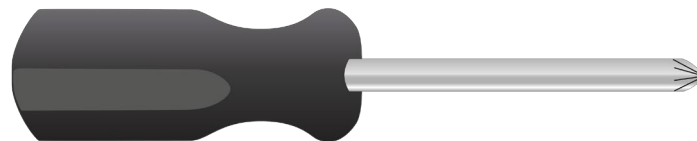




































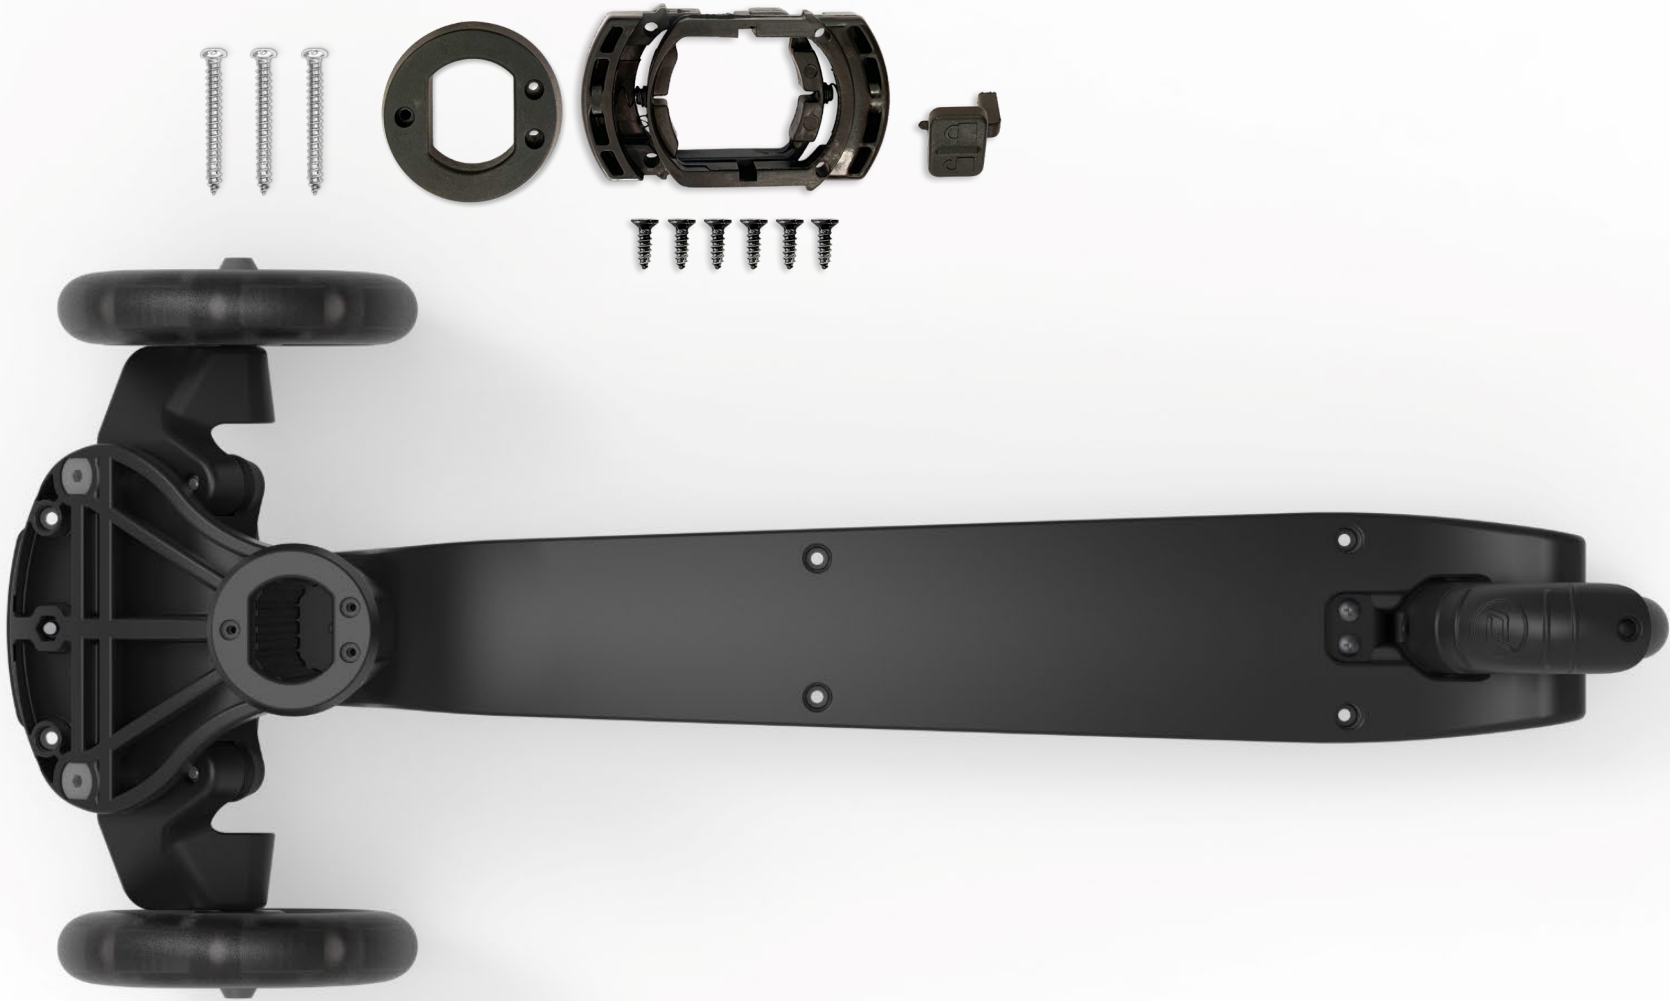
















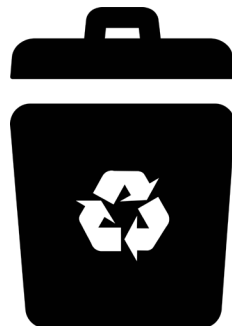

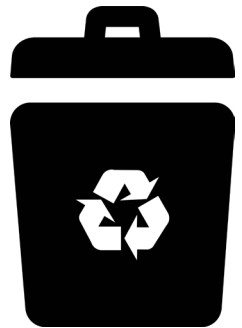








Optional –
use if
original
are missing.





































Click!



clever mobility