



| **Sparepart**



clever mobility




ASSEMBLY INSTRUCTION

Rear brake (K5)








Tool: Screwdriver

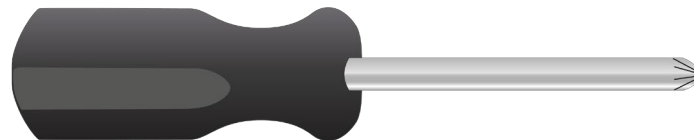




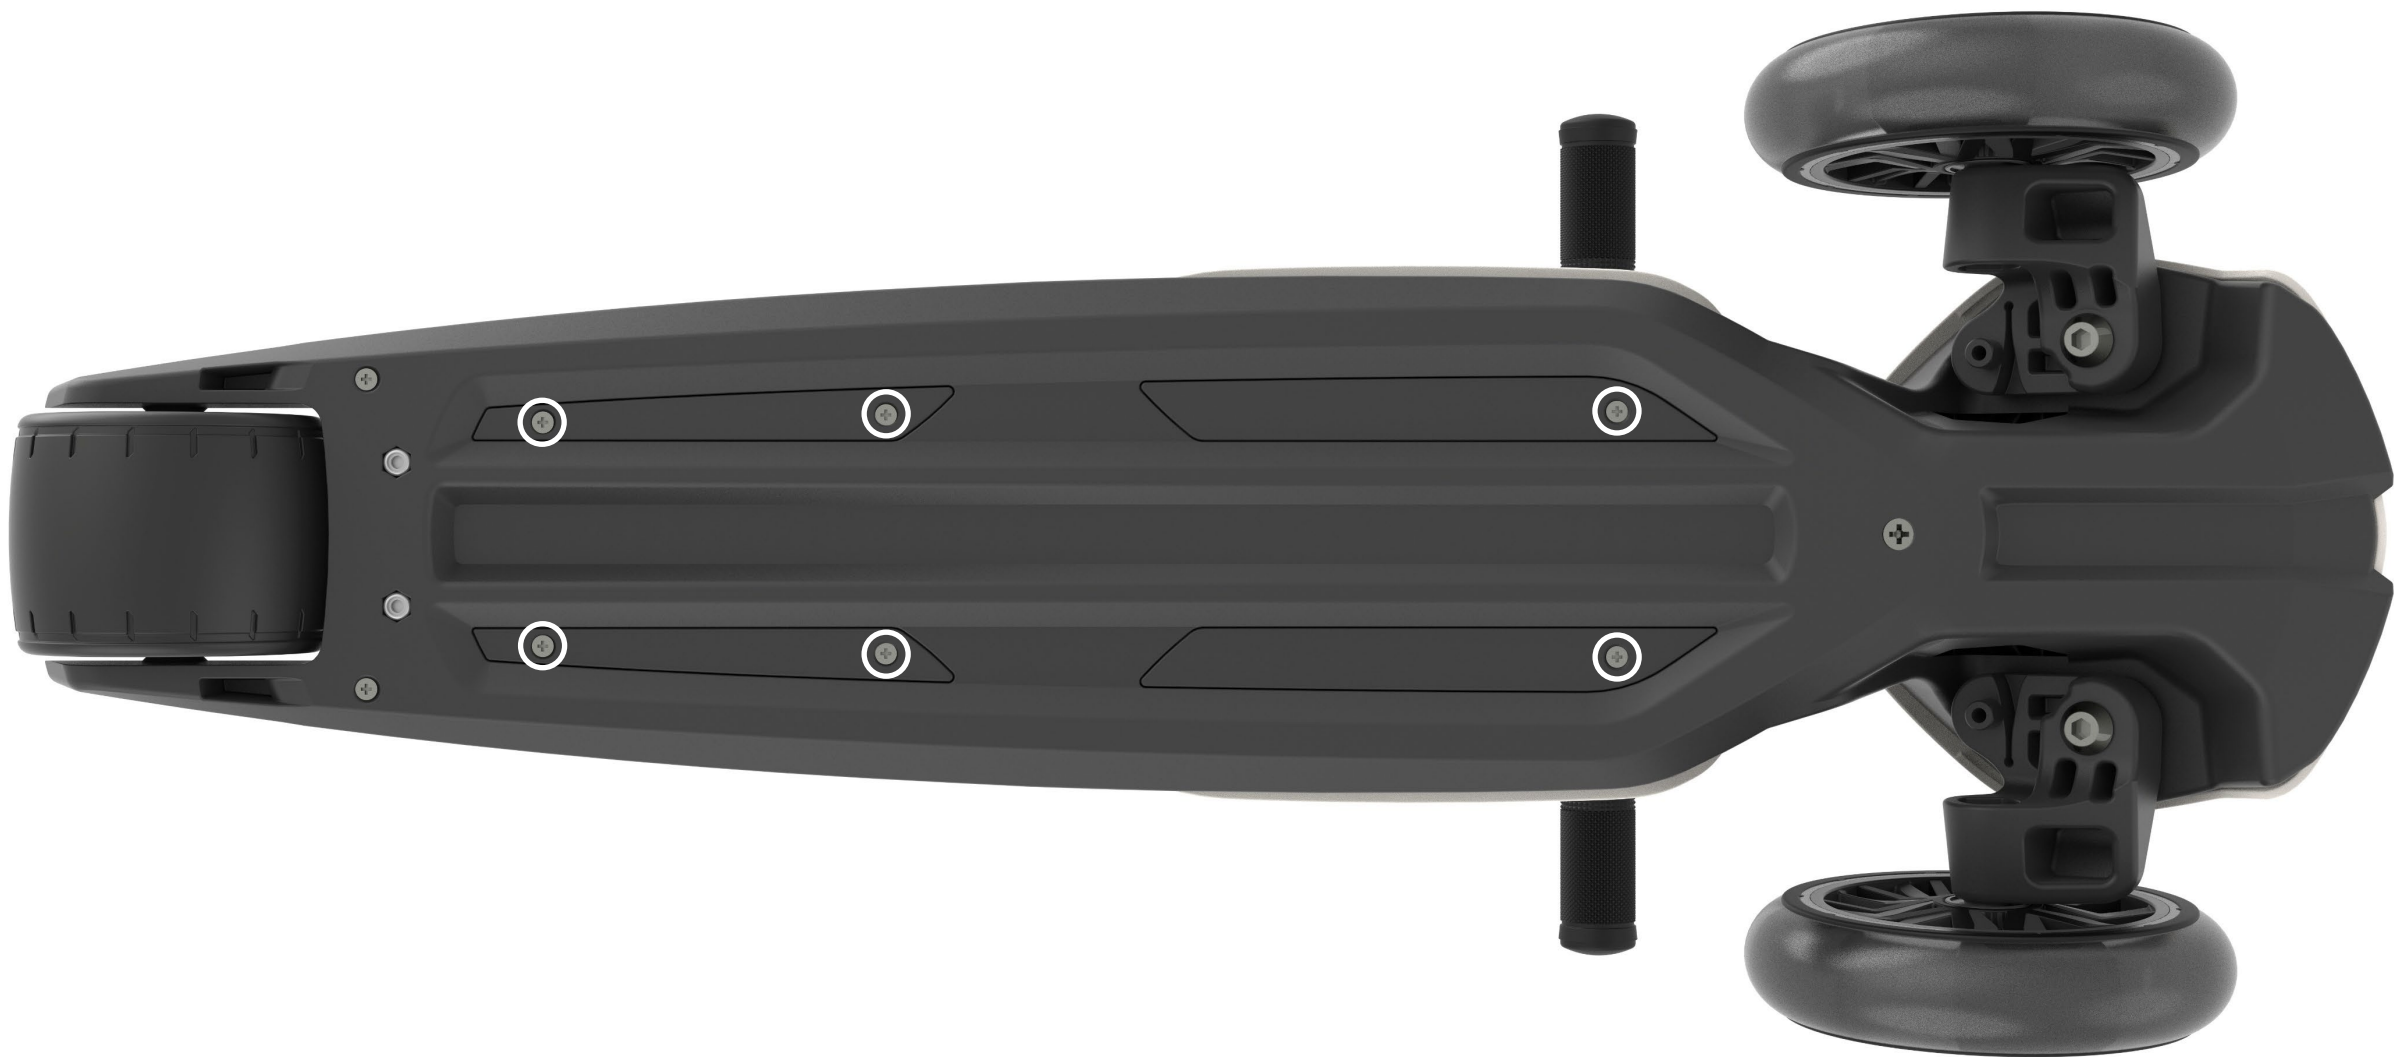

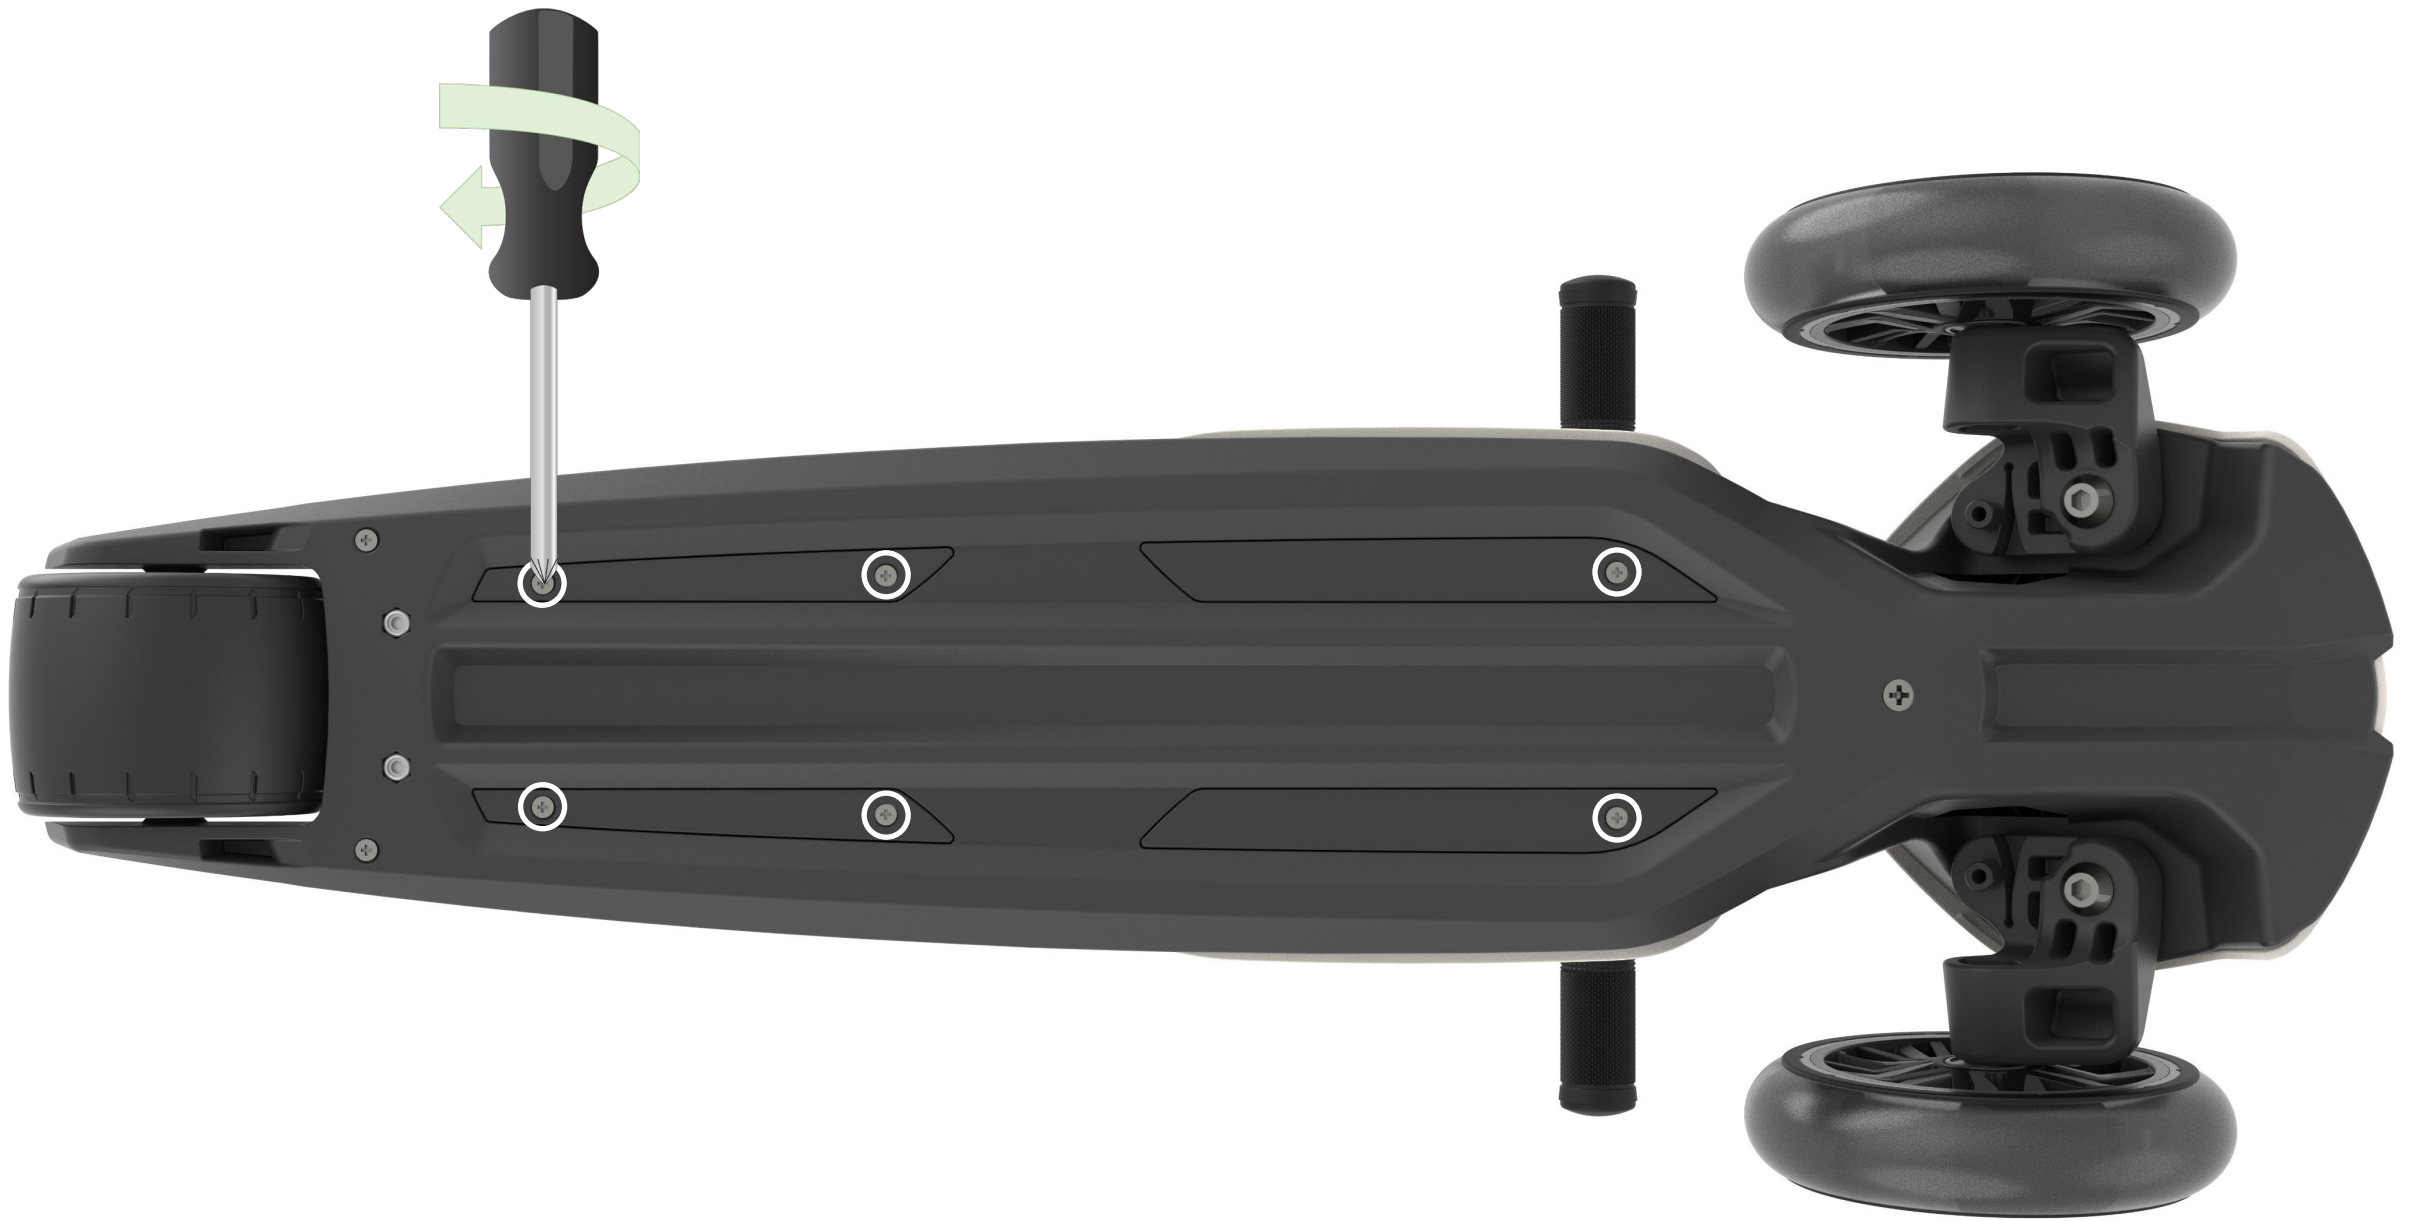

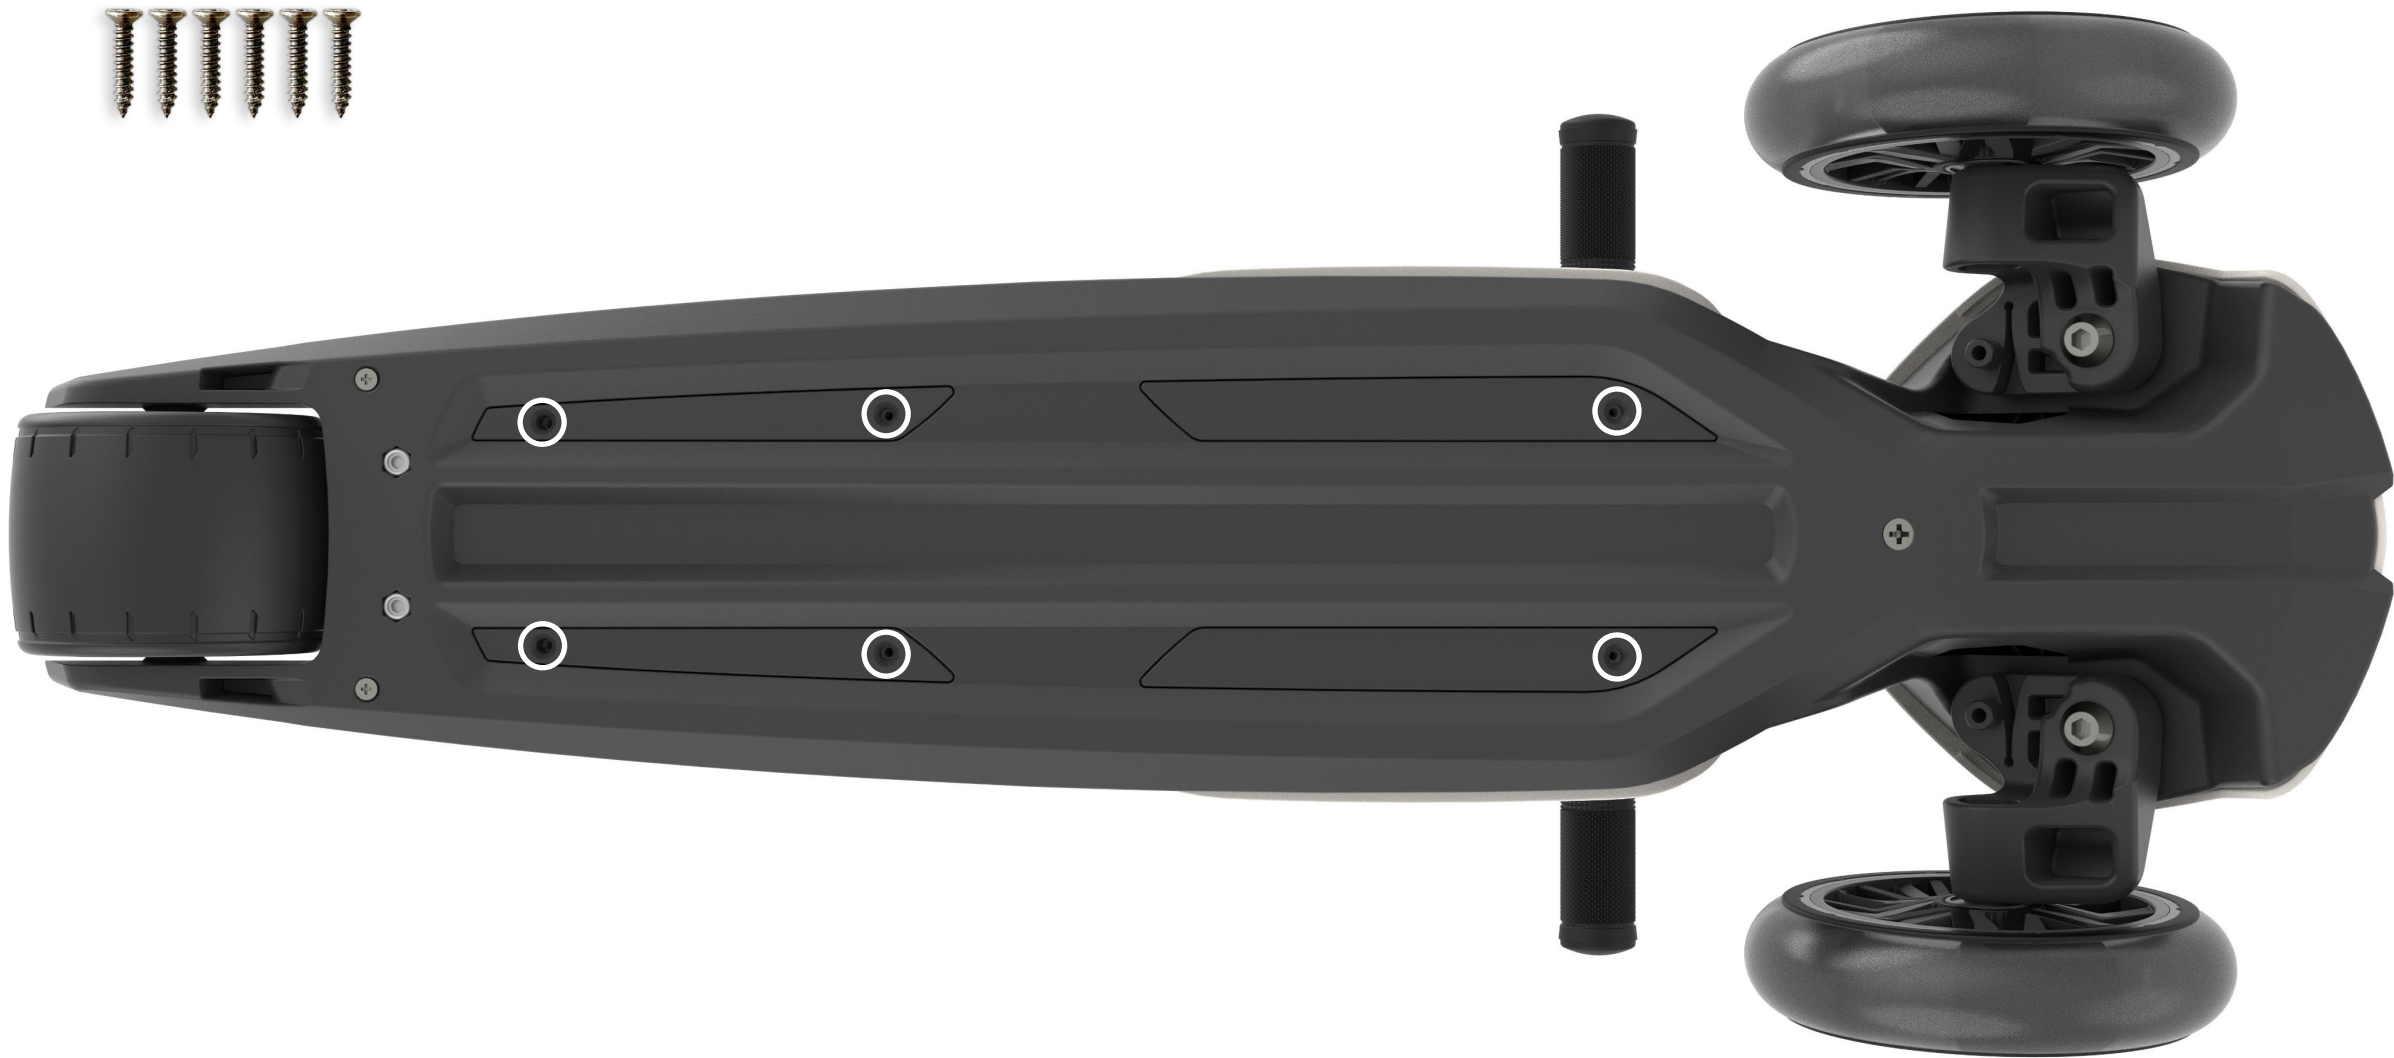



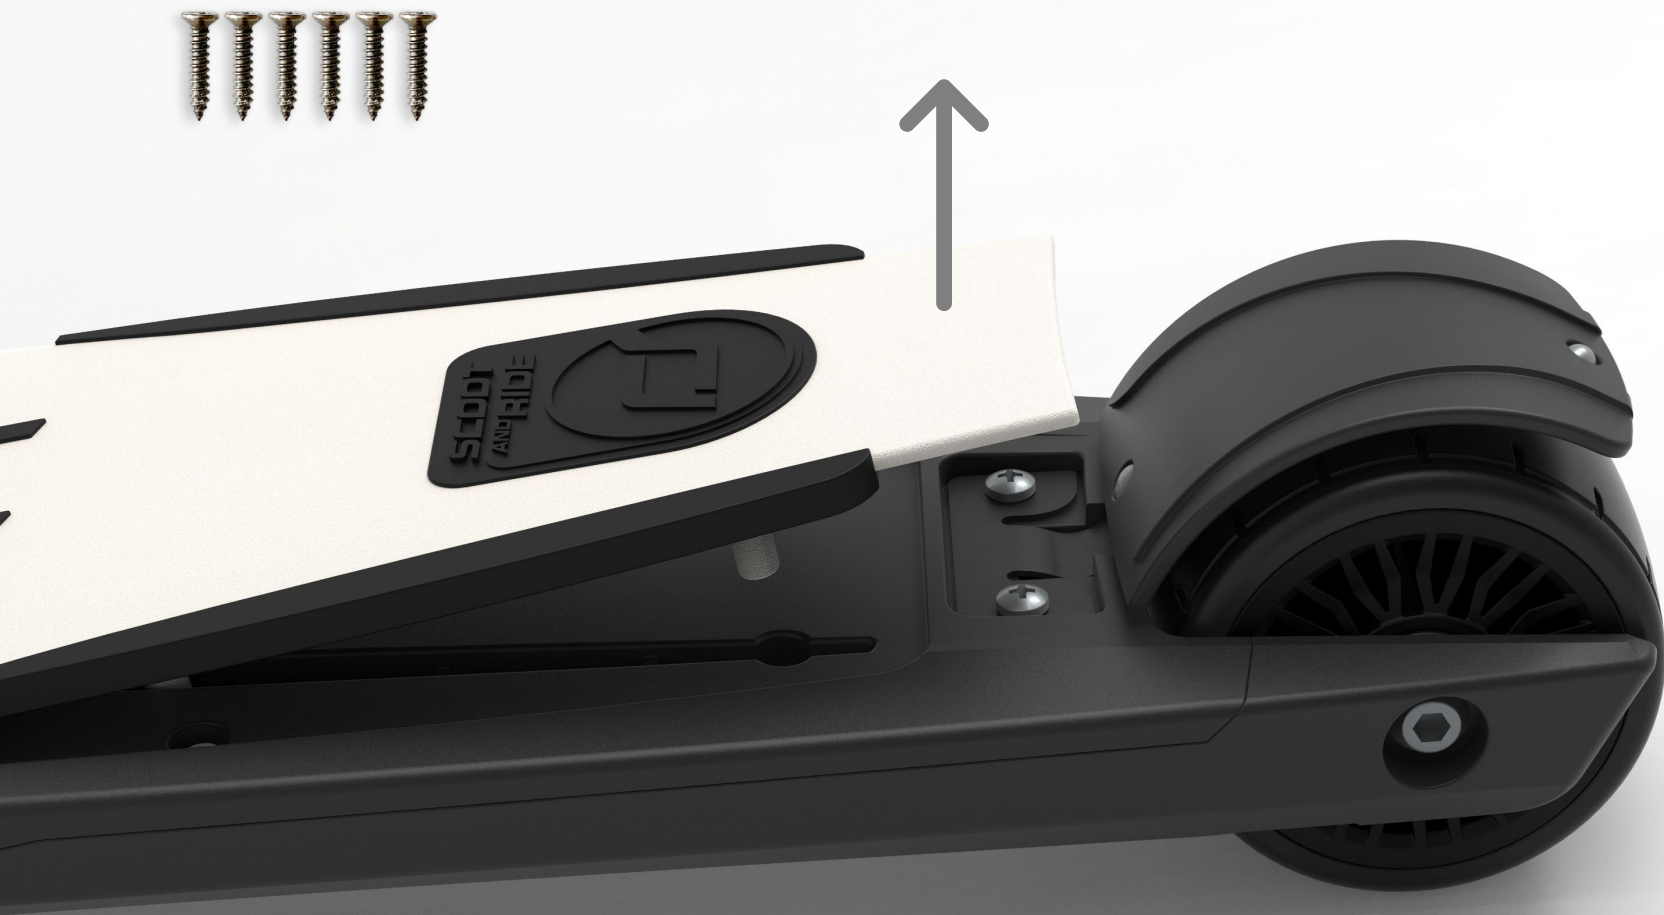




















Optional –
use if original
are missing.







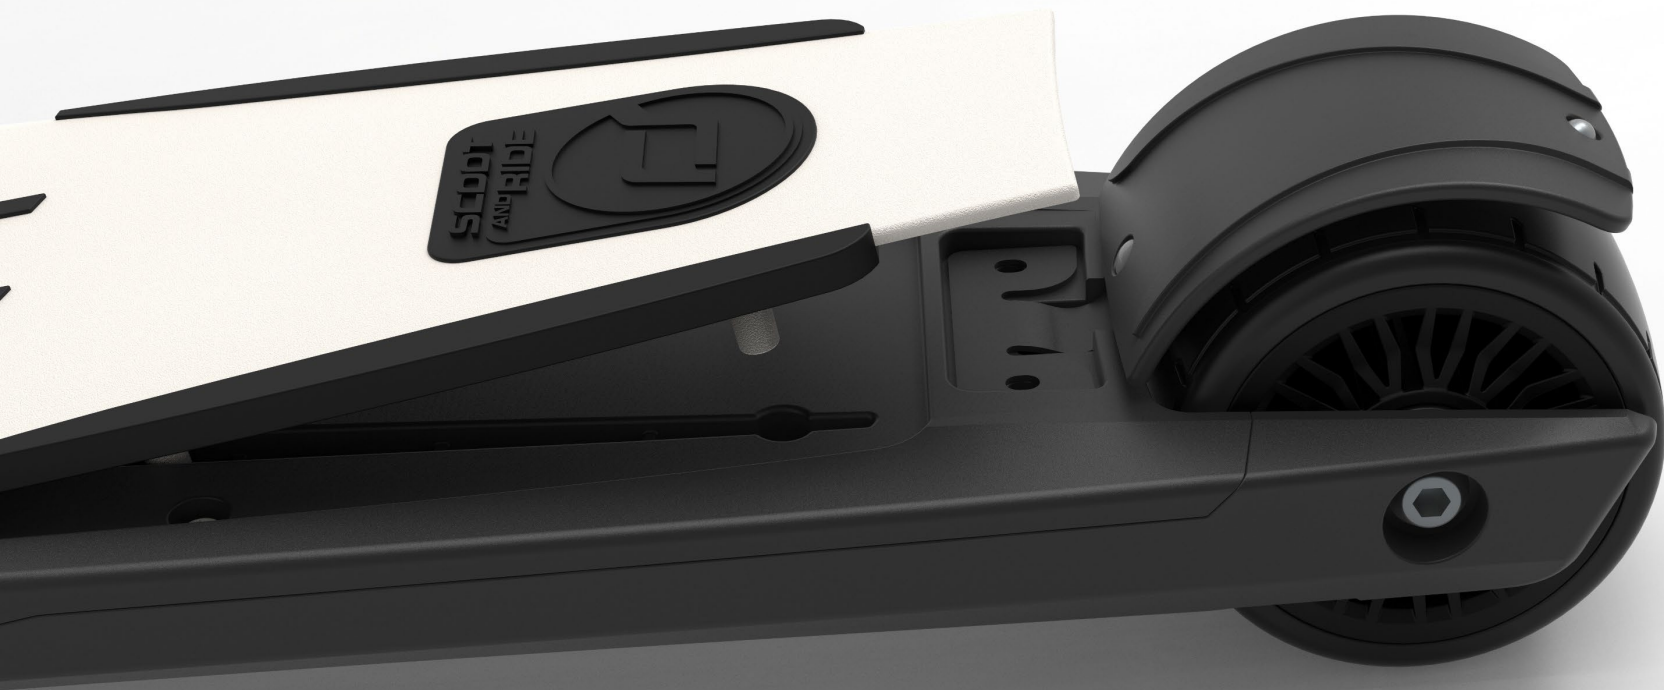

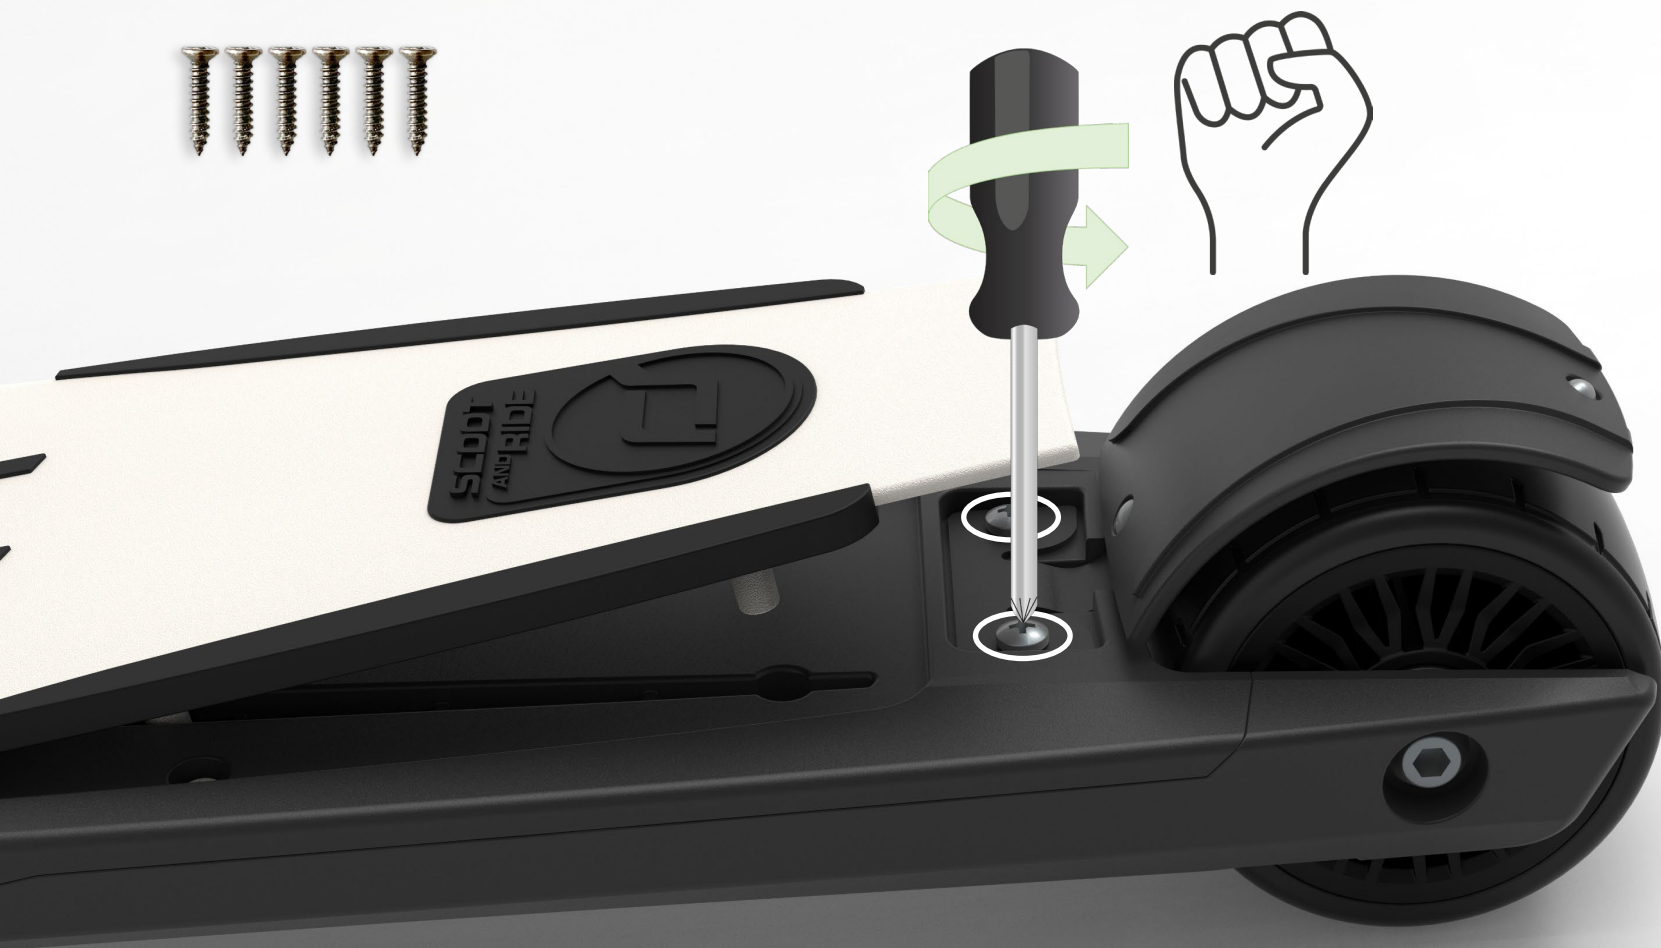



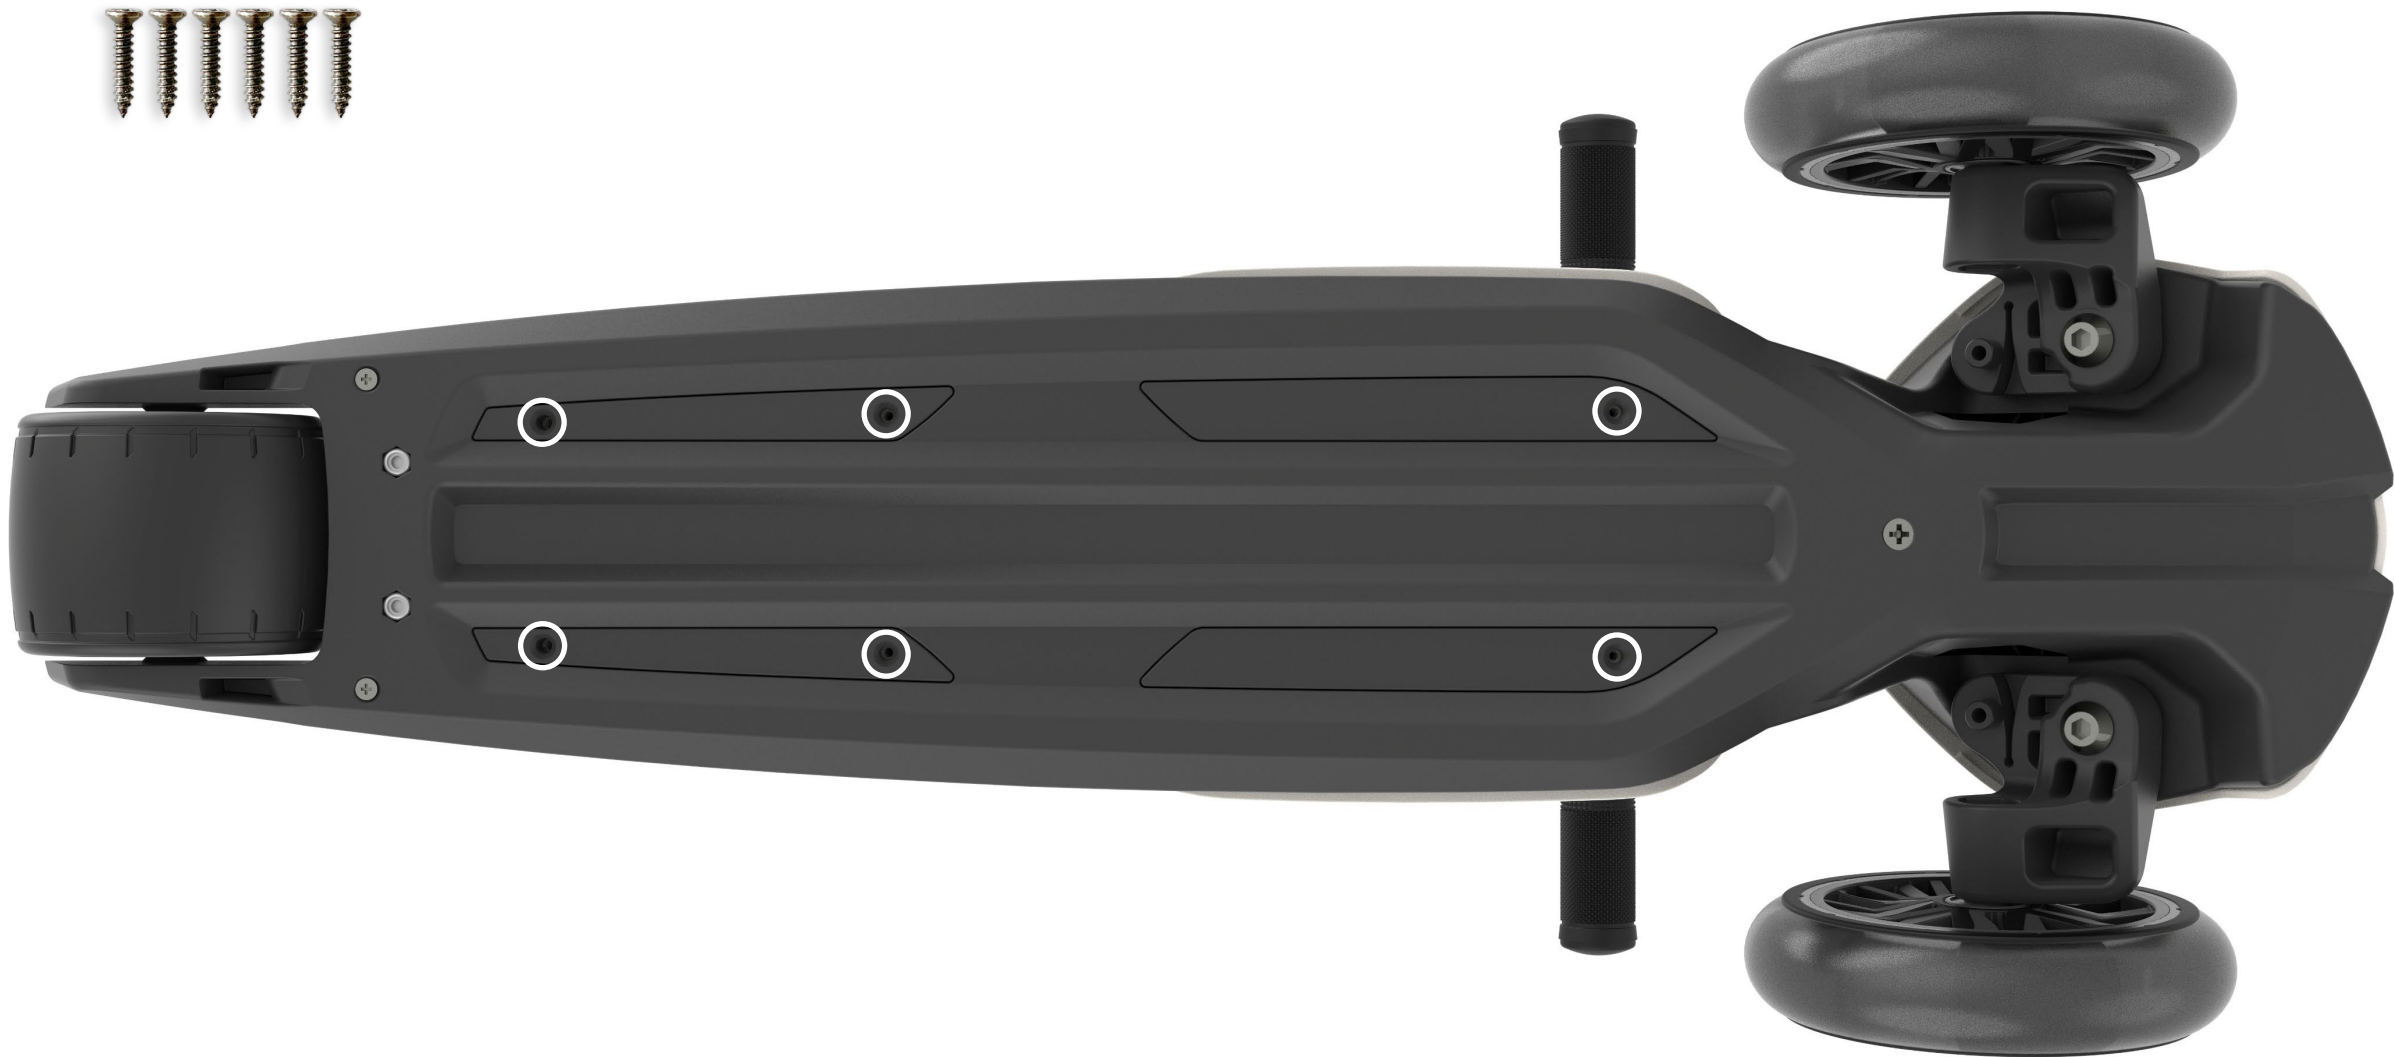

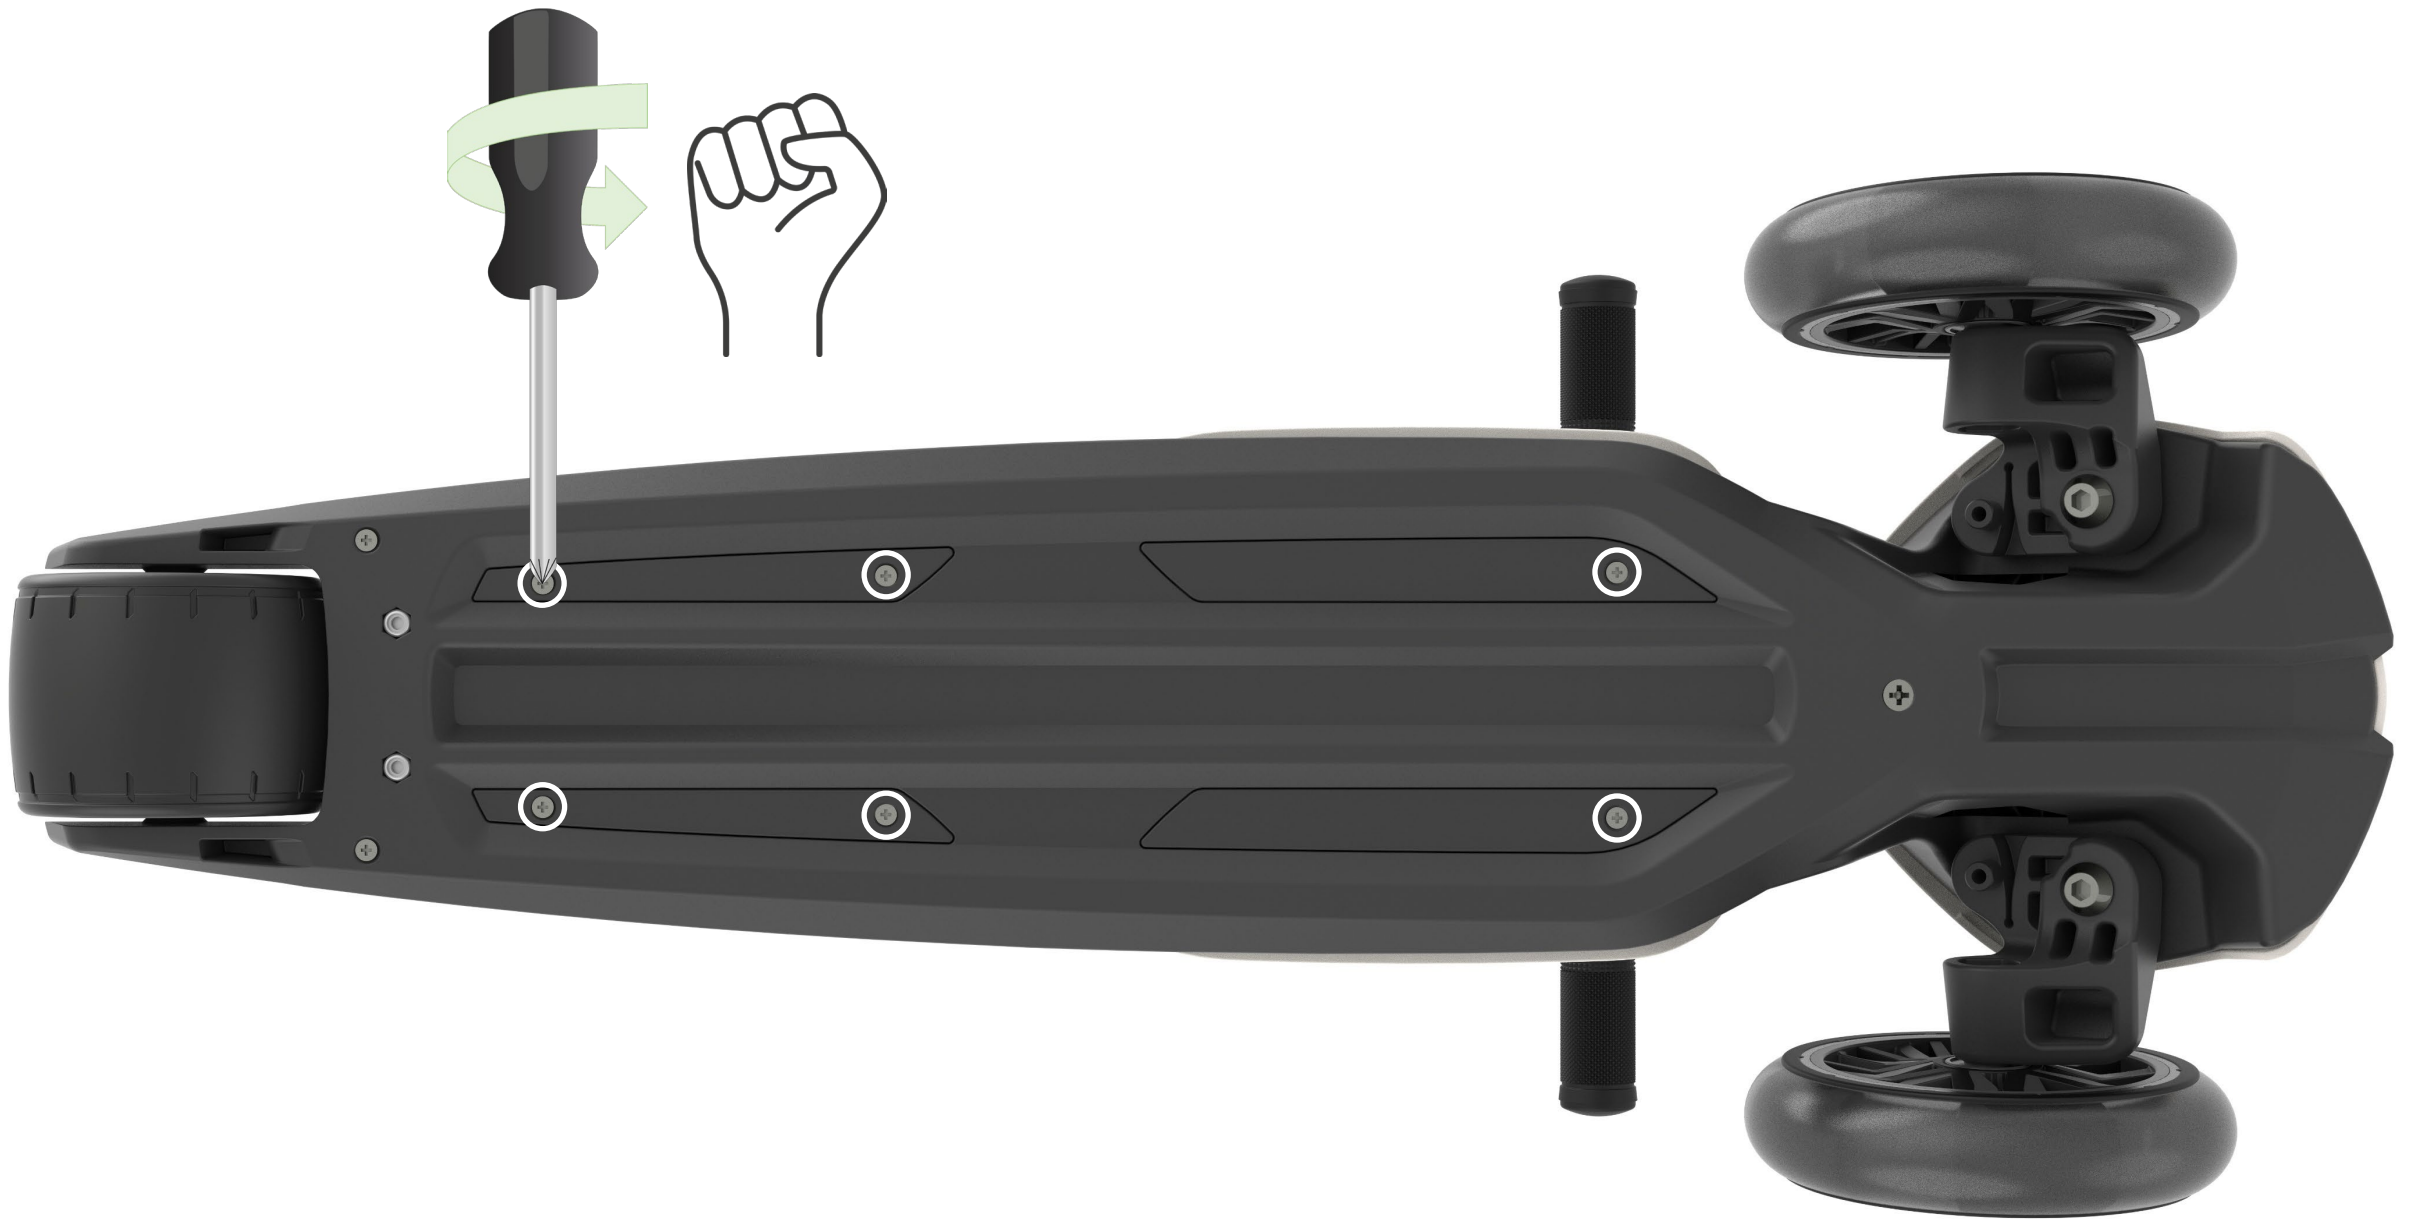



clever mobility

Scoot & Ride Vertriebs GmbH | Steiffstrasse 1, AT-4710 Grieskirchen | www.scootandride.com